


How to upgrade from the SD card

Note: The patch is suitable for C1 and FI9816P produced after March 2015. You can get the approximate date from the SN.

1. Please create a new folder in the root direction of the SD card, and name it as "ipc_recover_image_bin"

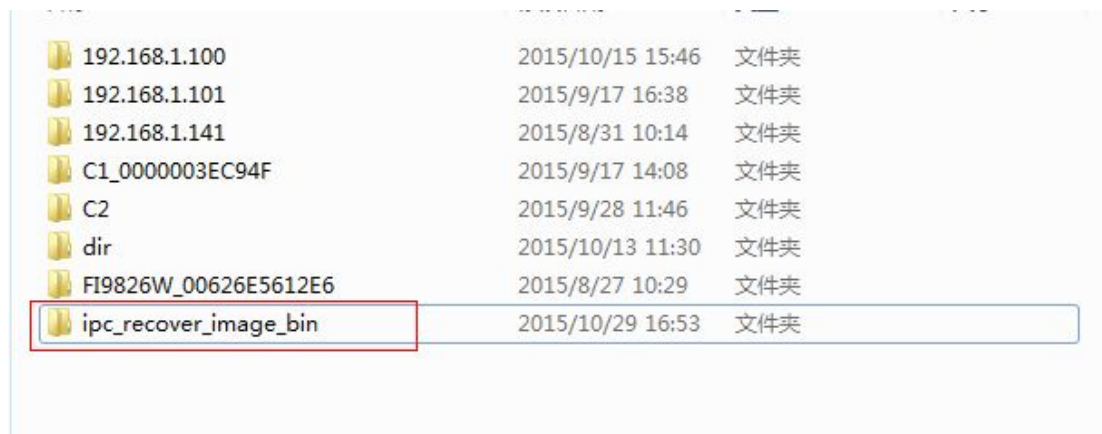

2. Copy the "recover_image.bin" file to "ipc_recover_image_bin" folder. Please don't change the name of the "recover_image.bin" file.
3. Please insert the SD card to the camera, turn off the camera and reboot it.
4. Please wait for 3 minutes around, you will hear "Hello, Foscam" which means the camera finishes upgrading and reboots again.
5. Take out the SD card, delete the "ipc_recover_image_bin" folder and "recover_image.bin" file, otherwise, the camera will be upgrade again when it reboots next time.

Please note: The patch is version 2.*.2.16, it is only suitable for C1, FI9816P.

End

Foscam Technical Support